


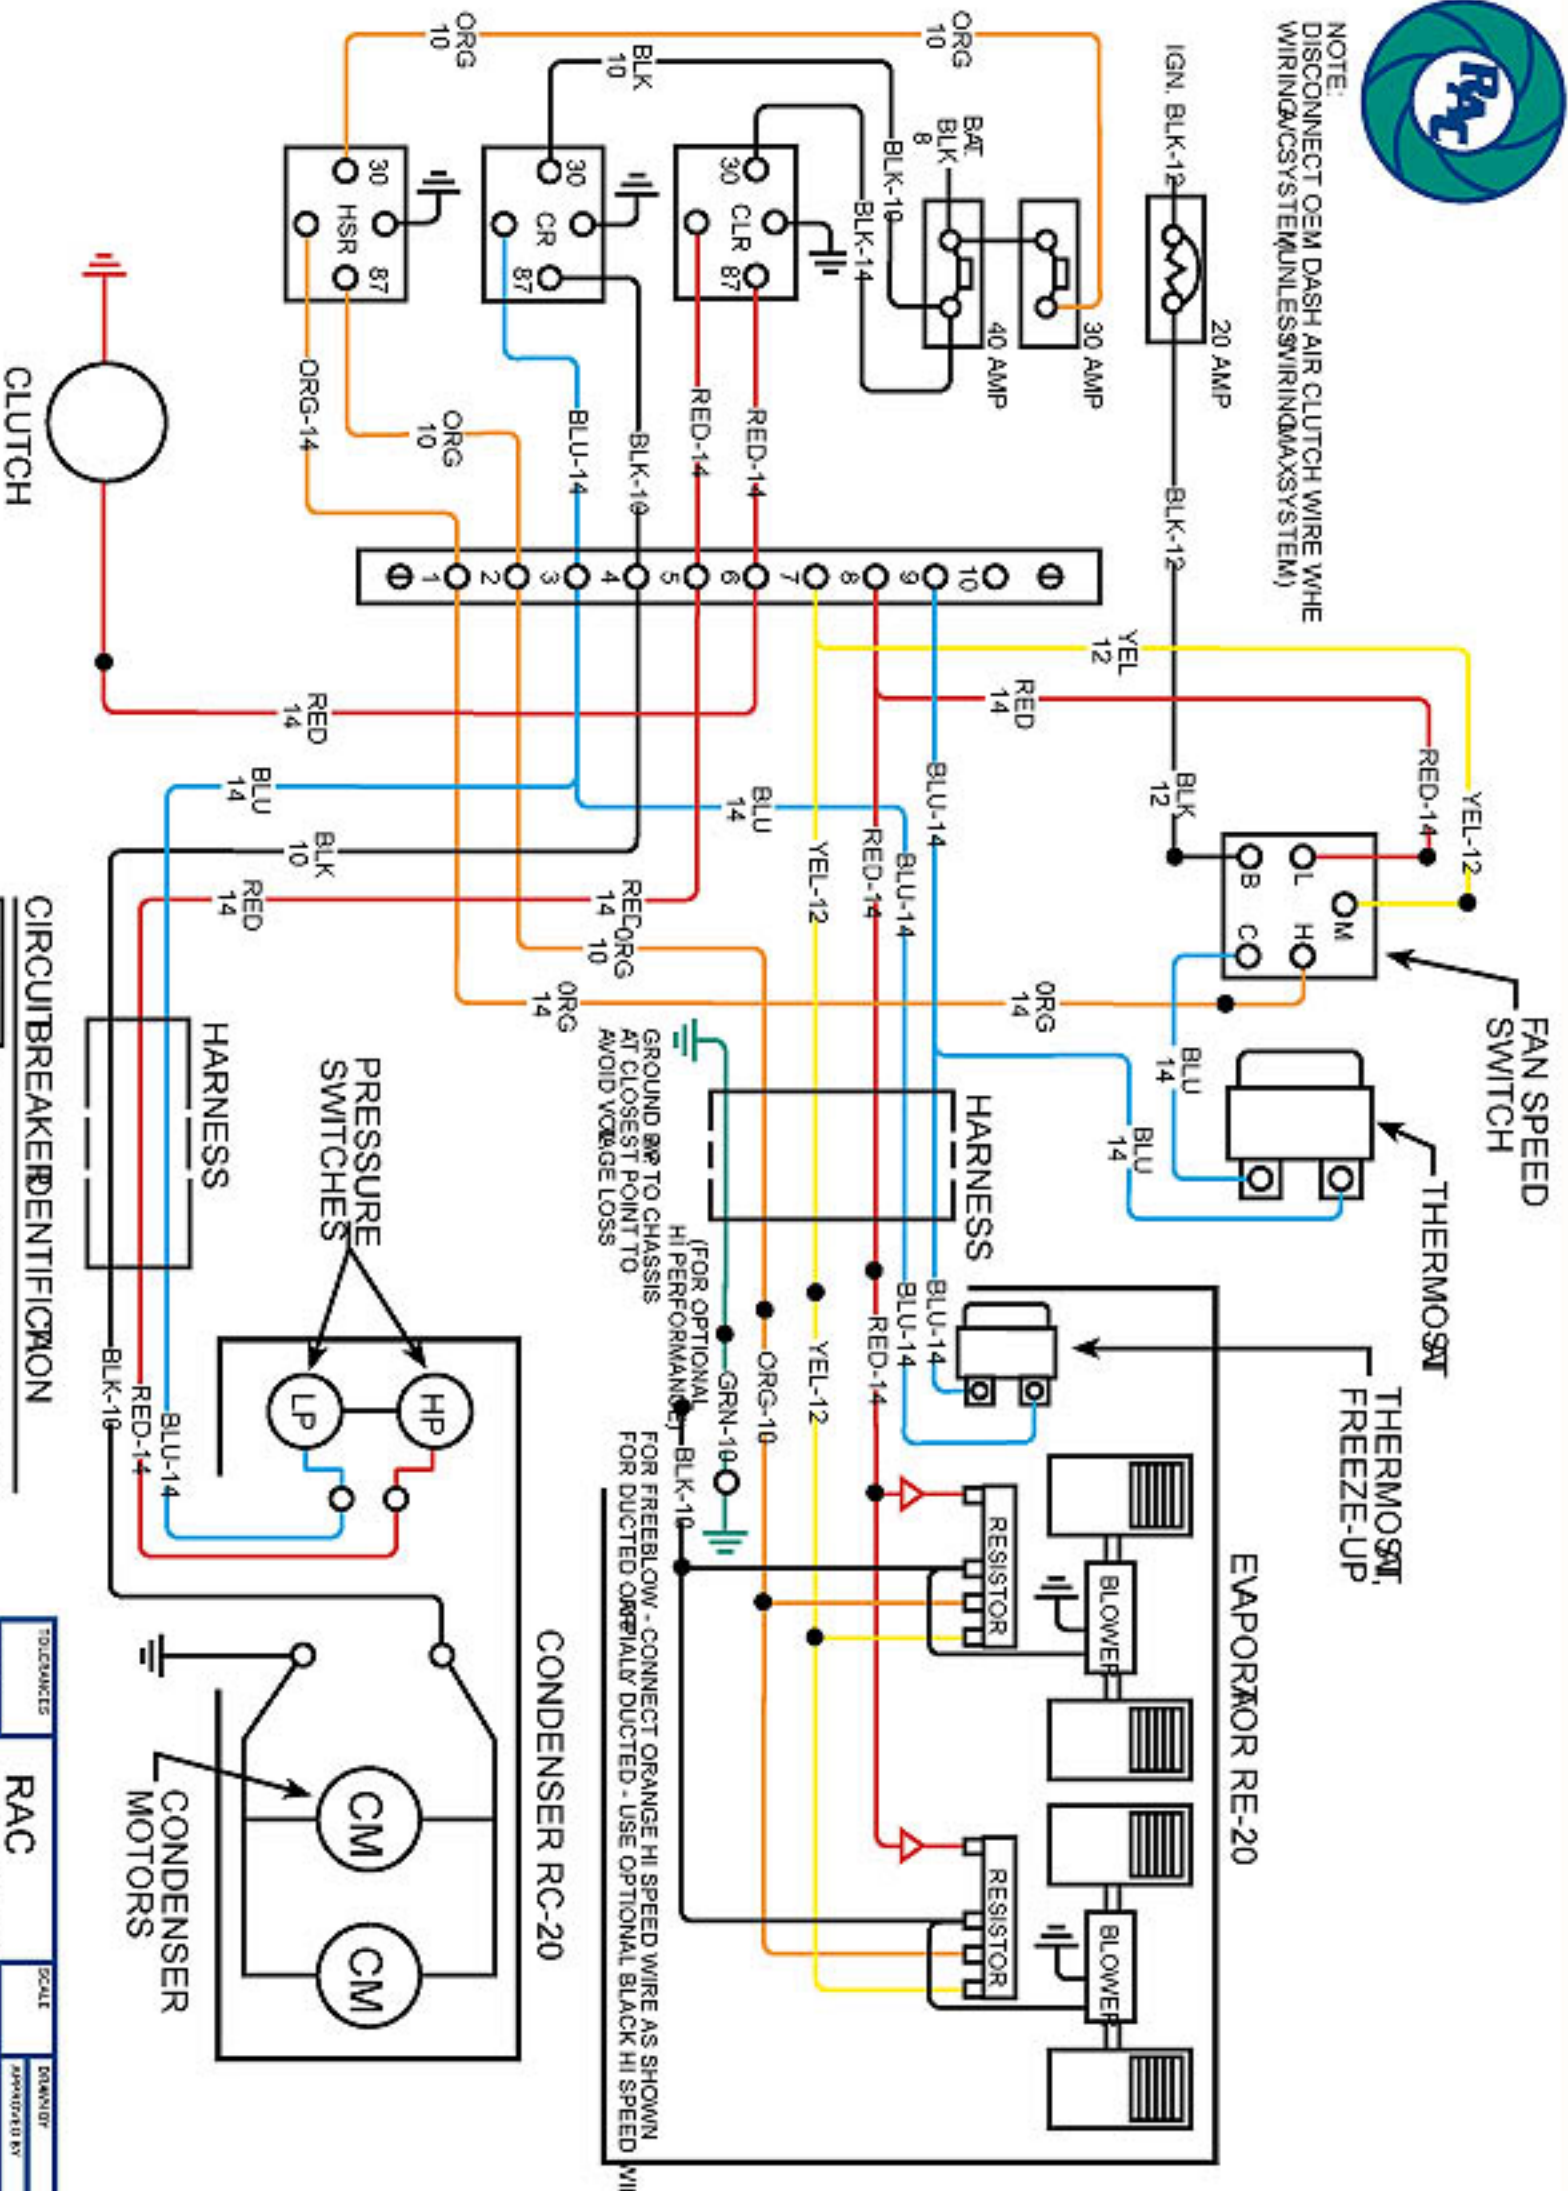

NOTE:
DISCONNECT OEM DASH AIR CLUTCH WIRE WHE
WIRING/C SYSTEM UNLESS WIRING MAX SYSTEM)



CIRCUIT BREAKER IDENTIFICATION

- TYPE III MANUAL RESET RESETS WHEN EXTERNAL BUTTON IS PUSHED.
- TYPE B - RESETS WHEN OVERCURRENTS CORRECTED OR REMOVED.

TOLERANCES	SCALE	DRAWN BY
DECIMAL		
FRACTIONAL		
ASSEMBLY	DATE	OPERATION NUMBER
RAC SYSTEMS		
RAC-2020		
RAC-2020		