




NOTE:
DISCONNECT OEM DASH AIR CLUTCH WIRE WHE
WIRING(SYSTEM UNLESS WIRING MAX SYSTEM)

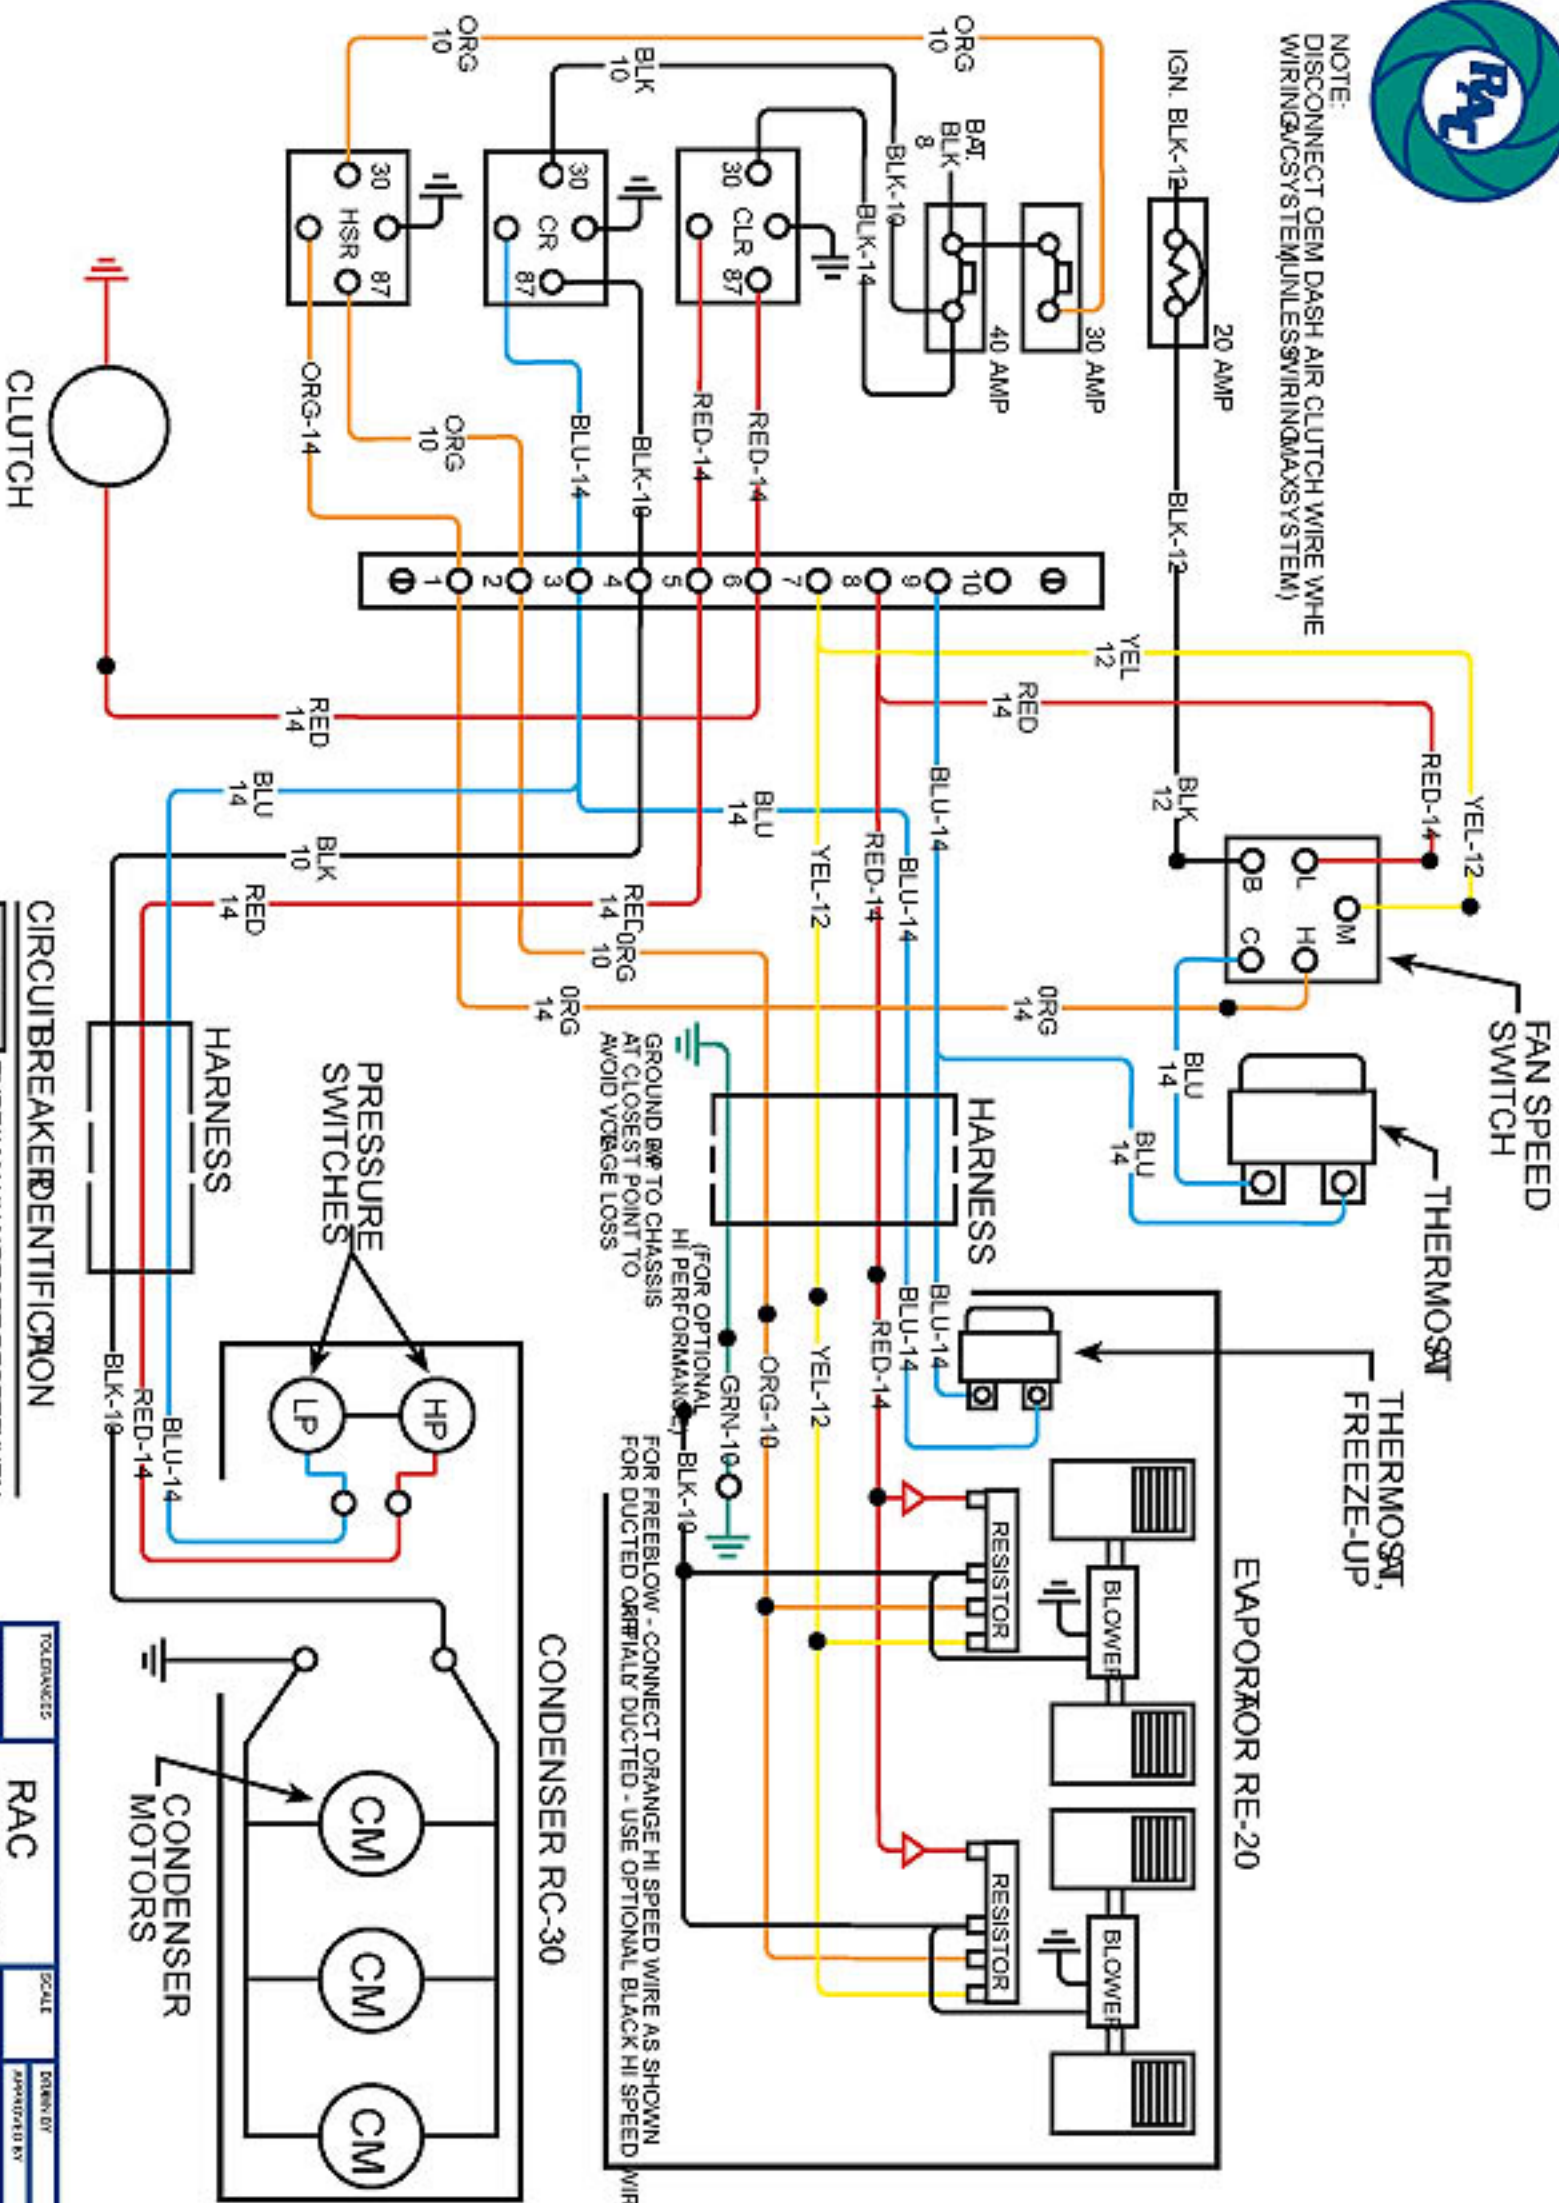

CIRCUIT BREAKER IDENTIFICATION

- TYPE III MANUAL RESET WHEN EXTERNAL BUTTON IS PUSHED.
- TYPE B - RESET WHEN OVERCURRENT IS CORRECTED OR REMOVED.

TOLERANCES	SCALE	DRAWN BY
DECIMAL		
FRACTIONAL		
ANGLES		
JOB	RAC SYSTEMS	DATE
	RAC-2030	
	RAC-2030	