


**CAUTION:**  
DO NOT USE CONDENSER WINTERGUARD KIT WHEN COMPRESSOR IS ENGAGED IN DEFROST MODE.  
IF OEM COMPRESSOR IS USED DURING DEFROST MODE IT MUST BE LOCATED BELOW FAN BLADES TO PREVENT BEING DAMAGED BY LIQUID SLUGGING.  
INLINE DIODES SHOULD BE USED FOR AT LEAST 8 AMP 200 VOLT

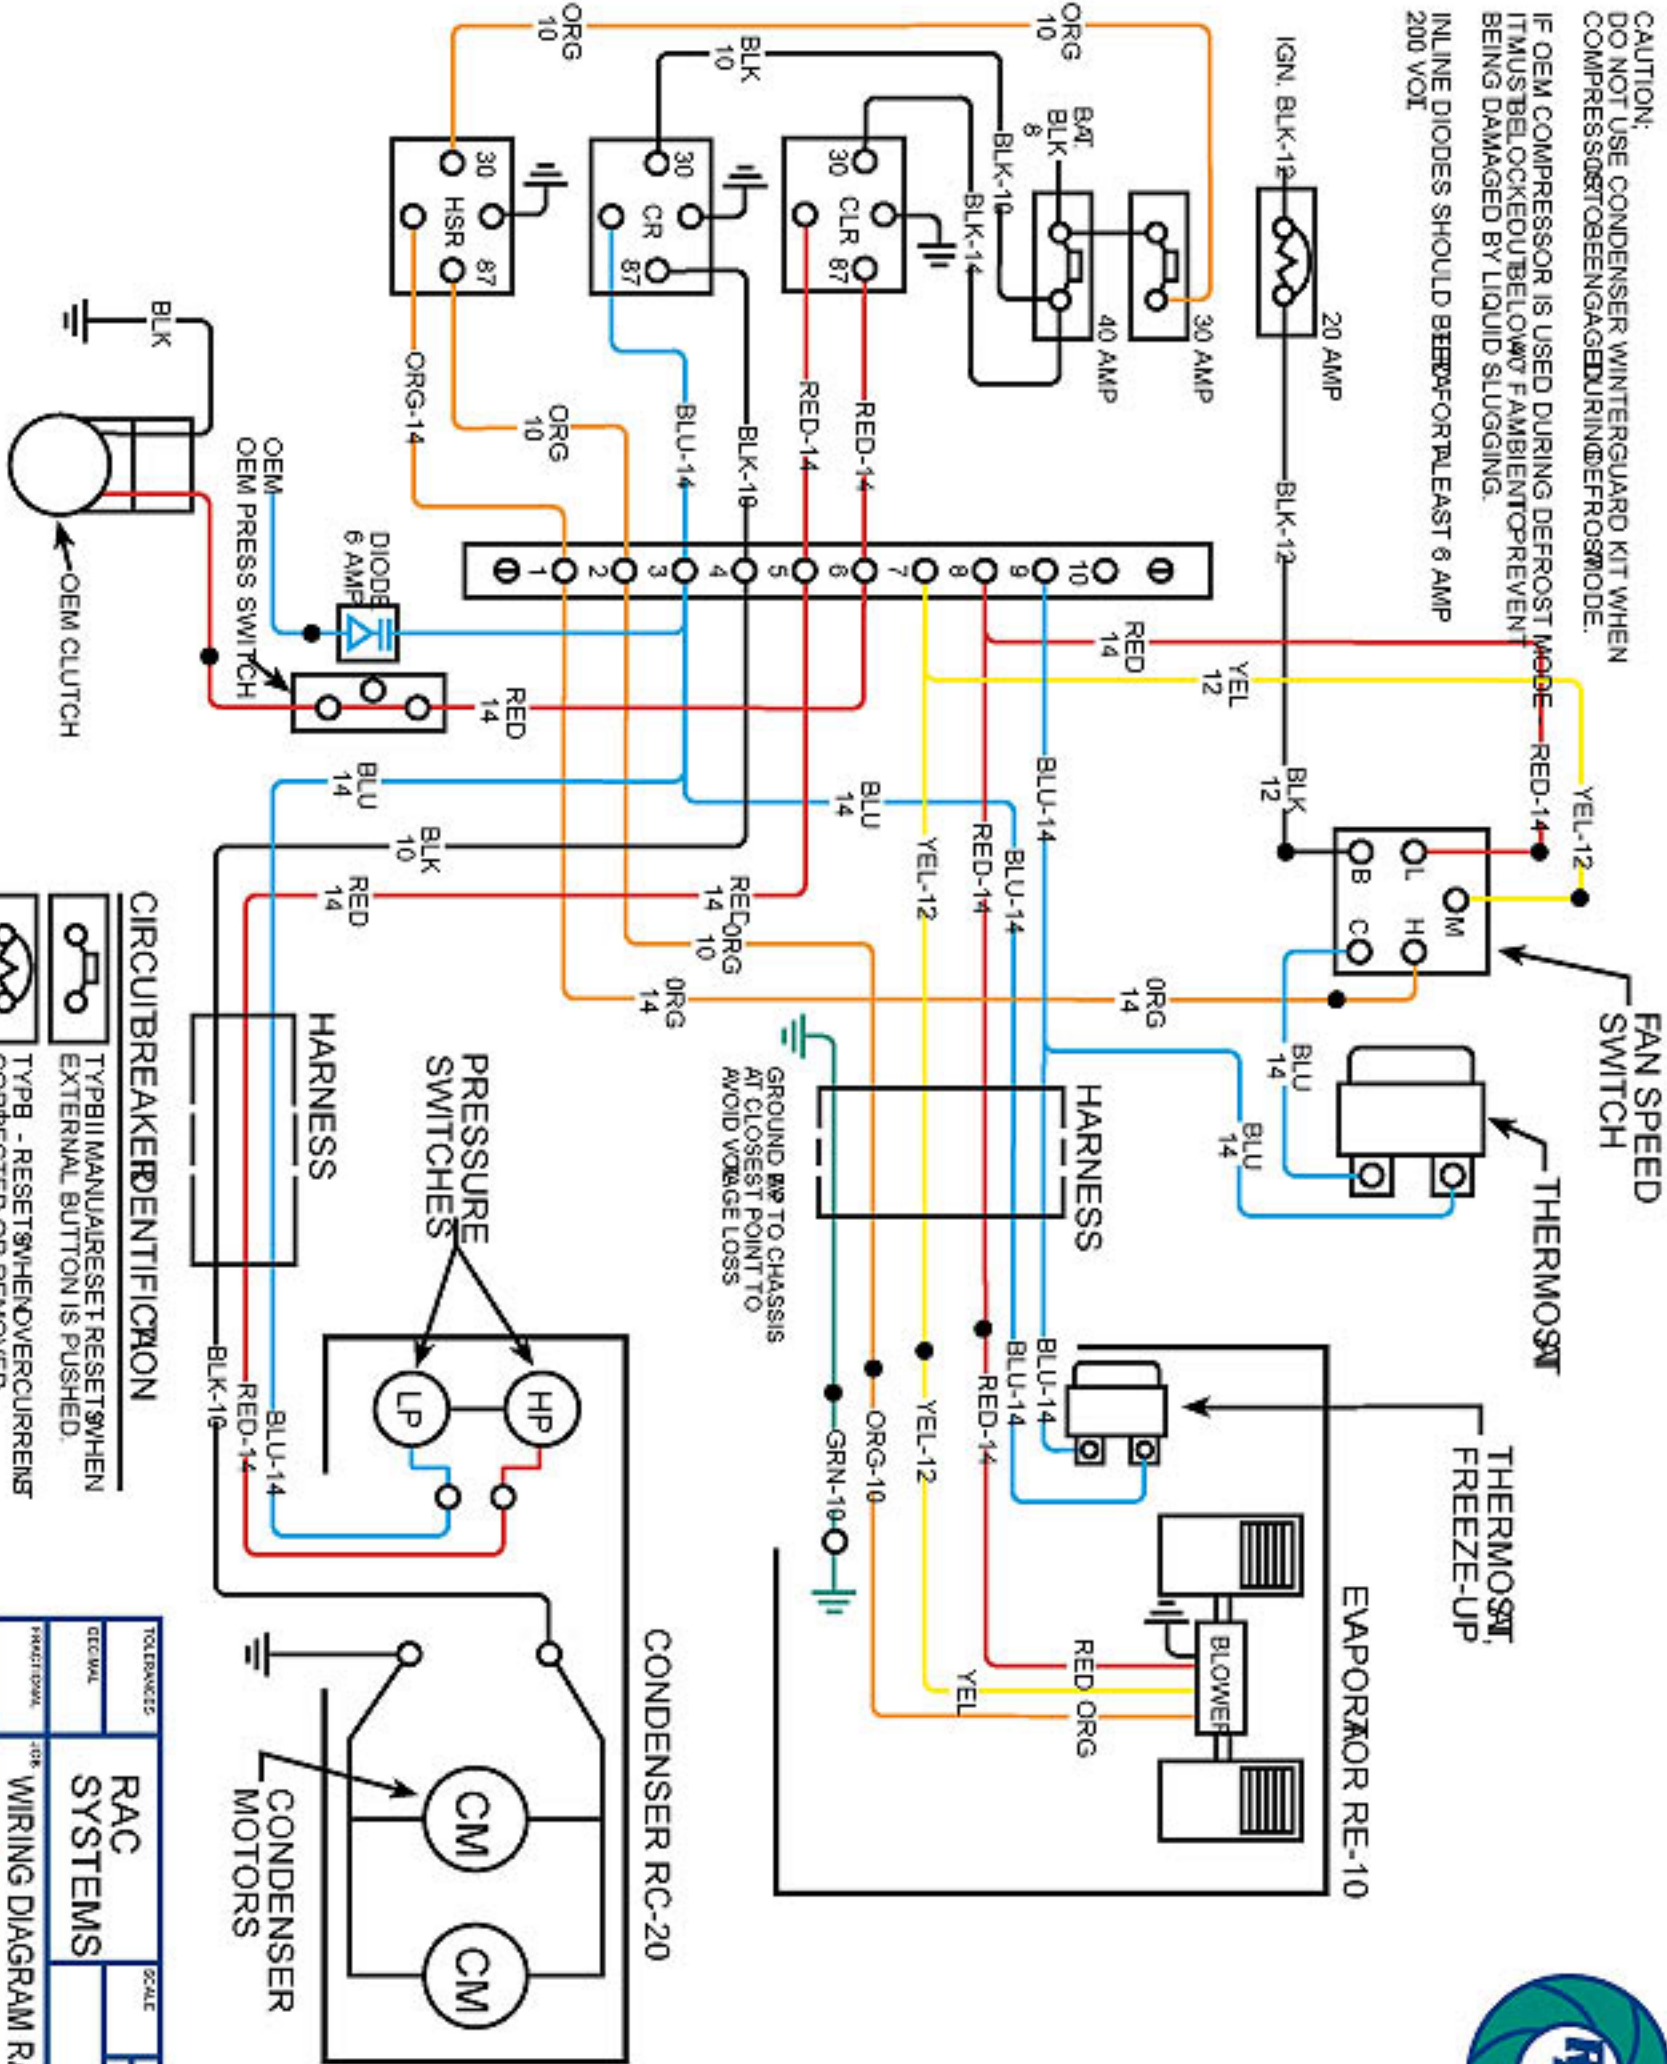

**CIRCUITBREAKER IDENTIFICATION**

- TYPE B - MANUAL RESET WHEN EXTERNAL BUTTON IS PUSHED.
- TYPE B - RESET WHEN OVERCURRENT IS CORRECTED OR REMOVED.

TOLERANCES	DECIMAL	SCALE	DRAWN BY
FRAC TIONAL	1/16"	AS SHOWN	DATE
RAC SYSTEMS		DRAWING NUMBER	
WIRING DIAGRAM RAC-1025 TI-E-IN		RAC-1025	

